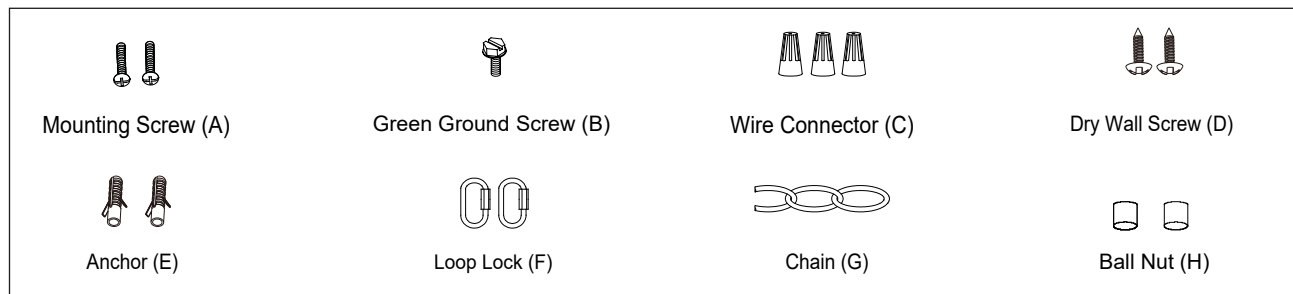# ASSEMBLY AND INSTALLATION INSTRUCTIONS

H0238

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
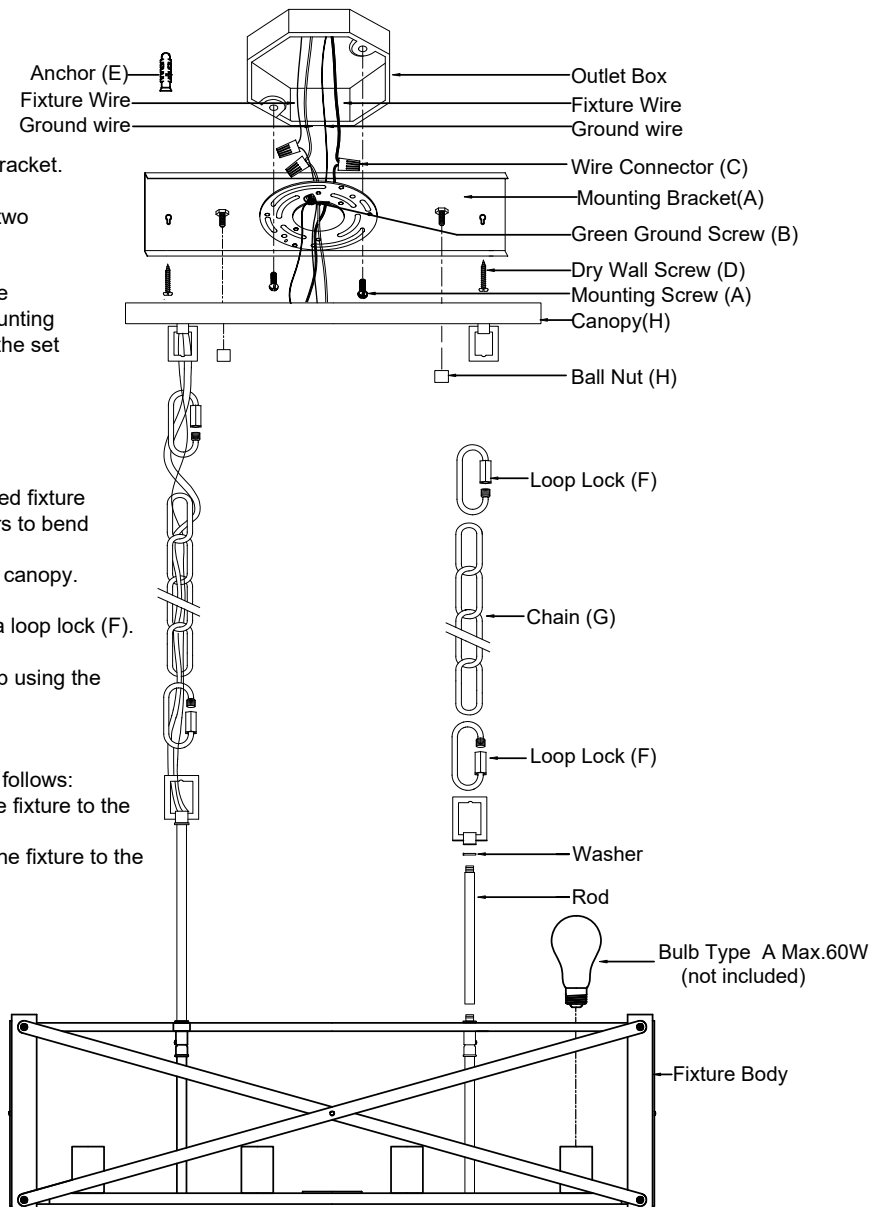2. READ AND SAVE THESE INSTRUCTIONS.

Hardware Package (included):

Mounting Screw (A)

Green Ground Screw (B)

Wire Connector (C)

Dry Wall Screw (D)

Anchor (E)

Loop Lock (F)

Chain (G)

Ball Nut (H)

Installation Steps

Turn off the power at fuse or circuit box

1. Loosen the two ball nuts (H), remove the mounting bracket.

2. Attach the mounting bracket to the outlet box using two mounting screws (A).

3. Thread the anchors (E) into the holes, then attach the mounting bracket to the outlet box by using two mounting screws (B). Secure the dry wall screws (D) through the set holes into the anchors (E).

4. Fix loop, washer and rod to the fixture body.

5. Connect the chain (G):
   - Determine needed length of chain to achieve desired fixture height. (To remove excess chain section, use pliers to bend link open.)
   - Weave the fixture wires through the one chain and canopy.

6. Connect one end of one chain (G) to the loop using a loop lock (F).

7. Connect the other end of the chain (G) to the top loop using the other loop lock (G).

8. Pull out the source wires from the outlet box.
   Make wire connections using wire connectors (C) as follows:
   ---Connect the smooth-coated wire (marked) from the fixture to the black wire from the power source.
   ---Connect the ribbed-coated wire (unmarked) from the fixture to the white wire from the power source.
   ---Attach the fixture ground wire to the mounting bracket with the green ground screw (B), then connect it to the house ground wire with a wire connector (C).
   Carefully put the wires back into the outlet box.

9. Attach the fixture canopy to the mounting bracket by inserting the fixture mounting bracket by inserting the fixture mounting screws (A), then secure it with two ball nuts (H).
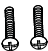
Anchor (E)
Fixture Wire
Ground wire

Outlet Box
Fixture Wire
Ground wire
Wire Connector (C)
Mounting Bracket(A)
Green Ground Screw (B)
Dry Wall Screw (D)
Mounting Screw (A)
Canopy(H)
Ball Nut (H)

Loop Lock (F)

Chain (G)

Loop Lock (F)

Washer

Rod

Bulb Type A Max.60W (not included)

Fixture Body

VAXCEL

190507

10. Install the bulb (not included).
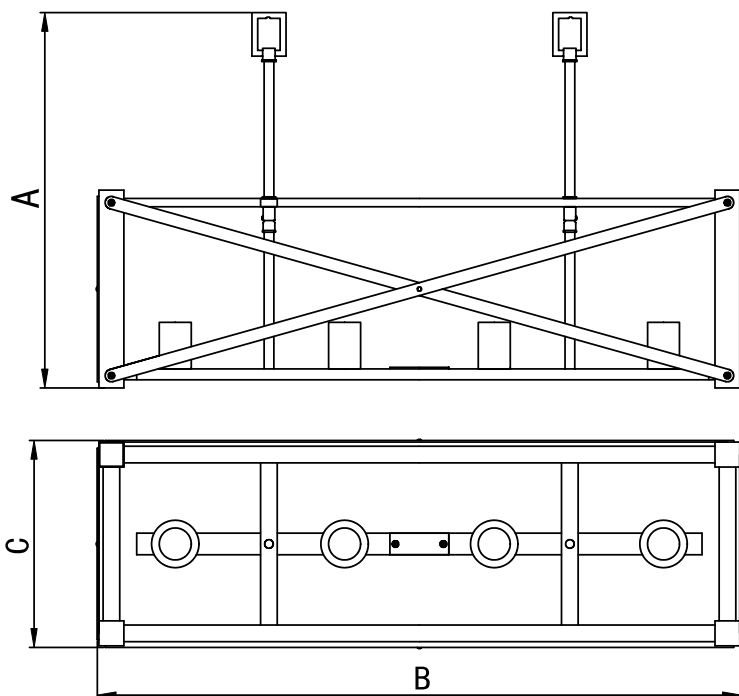   Check relamping label at socket area or packaging for maximum allowed wattage.

Turn on the power at fuse or circuit box

The following parts are available for re-order if damaged or missing.

Spare Parts List:

Mounting Screw (A)	Green Ground Screw (B)	Wire Connector (C)	Dry Wall Screw (D)
Anchor (E)	Loop Lock (F)	Chain (G)	Ball Nut (H)

Assembly Kit
6098MM (1SET)

A: 22"

B: 30-1/2"

C: 9-3/4"

VAXCEL

190507